MobiSafe Instructions

To reset your combination –


- 1. Set combination to the opening combination (factory setting 0-0-0-0) and push in the opening button to release the Locking Head from the Hard Case body.
- 2. Push in and rotate the Reset Button 90 degrees clockwise with a coin or paper clip.
- 3. Turn the dials to your desired combination.
- 4. Rotate the Reset Button 90 degree counter-clockwise, back to its original position.
- 5. Keep your combination in a safe and accessible place for future reference.

To secure your valuables –

- 1. Turn the dials to the opening combination.
- 2. Press the Opening Button to detach the Hard Case from the Locking Head.
- 3. Load your memory card, cash, keys, credit cards, digital camera, cell phone, iPod, MP3, or any other valuables into fitted Hard Case.
- 4. Attach the Hard Case back to Locking Head and scramble the dials.

To secure the MobiSafe cable-

- 1. Turn the dials to the opening combination.
- 2. Slide release knob to the left as shown below to release Cable Head
- 3. Loop the cable around the object you wish to secure the MobiSafe to.
- 4. Insert the Cable Head back into the Locking Head and scramble the dials.

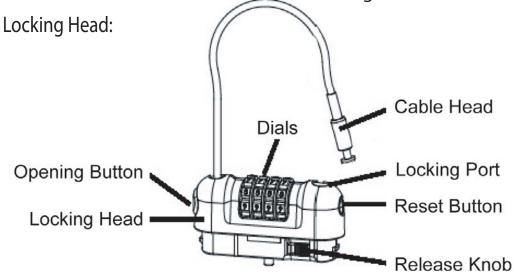

Keep your combination in a safe and accessible place for future reference.



