


OPERATION INSTRUCTIONS

Warning: Do Not Use On Loaded Guns!

To open the Lock:

The lock is preset at 0-0-0 to unlock.(Even though dials may appear in other numbers).

1. Turn the dials to the present combination and align the numbers to the Guide Line.
2. Push the Unlock Button and pull the apart.

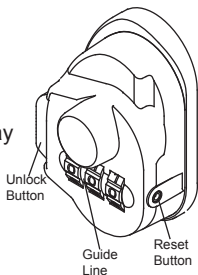

To change combination

1. Open lock
2. Push the reset button in all the way with a pen (or other) while turning the dials to desired combination.
(Do not let go of the button while setting the dials).
3. Release the Reset Button. The lock is now set to your new combination.

To Lock:

1. Make sure the safty is in the SAFE position.
2. Caution: Check the gun is not loaded or cocked.
NEVER use the lock on a loaded gun.
3. Put front (the part with the dials) on one side of the trigger against the trigger guard.
Check the best locking position before completing the next step.
4. Place the back part onto the opposite side and insert it into the front.
5. Press two parts tightly together and turn dials.